



MYE Entertainment MYE PERSONAL DIGITAL TV SYSTEM

Owners Manual

Installation Notice

Instant Channel Programming Feature
Complete the Signal / Power Connections and
Press 0001 to Begin Channel Programming Scan

Covers Models:

M156TV2-NAQ2

M156TV2-PRO (Pro:Idiom)

TABLE OF CONTENTS

	page(s)	page
CHAPTER 1 : IN THE BOX	6	6
CHAPTER 2 : KEY PAD ORIENTATION	7	7
CHAPTER 3 : CHANNEL MENU	8 - 9	8
CHAPTER 4 : PICTURE MENU	10 - 11	10
CHAPTER 5 : AUDIO MENU	12 - 14	12
CHAPTER 6 : TIME MENU	15 - 17	15
CHAPTER 7 : SETUP MENU	18 - 20	18
CHAPTER 8 : LOCK MENU	21 - 24	21
CHAPTER 9 : CUSTOM FEATURES MENU	25 - 28	25
CHAPTER 10 : INTELLIJACK - HEADPHONE JACK REPLACEMENT	29	29
CHAPTER 11 : WARRANTY	30 - 31	30

GENERAL SAFETY and CARE

Thank you for your purchase of the MYE Entertainment personal viewing screen.

This product has been designed specifically for use in the health & fitness industry, ensuring maximum performance and longevity in the harsh fitness club environment. Properly cared for, this product will provide years of high-quality entertainment.



Prepare an area in which to place the product components as they are removed from the box prior to installation. The surface of the work area should be clean so as not to damage the screen and associated components.



Do not open package using sharp instruments or tool.



Inspect all shipping carton for signs of damage and to ensure that the contents of the carton have not broken loose during shipping.

Important Safety Instructions

Before you begin, read all warnings.



CAUTION! **RISK OF ELECTRICAL SHOCK**

Do not attempt to disassemble, open or otherwise service the product. There are no user-serviceable parts inside.



Do not expose unit to liquid, rain, excessive moisture or areas of high humidity.



Do not use bent, damaged or modified power cords. Discontinue use and contact your technician.



Do not spray cleaner directly onto monitor. Clean only with a dry, soft cloth.



- ⚠ Only use the power adapter ***supplied with this product!*** Use of non-approved power adapters may result in personal injury or damage to the product.
- ⚠ This product should be installed using a manufacturer-approved mounting method ONLY. Use of unapproved mounting brackets may damage the product and void the warranty.
- ⚠ Route all cables safely per mounting situation. Ensure that the cables are routed in a manner as to avoid being damaged by personnel or equipment.
- ⚠ Ensure the product has adequate ventilation so as not to overheat the product. Do not place anything on the product that may impede proper air circulation and thus damage the product.
- ⚠ Avoid extreme temperatures. Locate the equipment away from sources of heat, such as radiators and heat registers.

FCC Statement

Radio Frequency Interference (RFI) Federal Communications Commission, Part 15

This device complies with Part 15 of the [FCC](#) Rules (47CFR15). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This product generates and utilizes radio frequency energy. If not installed and maintained in accordance with the installation & maintenance procedures as prescribed by MYE Entertainment, there is a possibility of causing interference with other services.

In order to determine whether or not this product is generating harmful interference, try performing the following steps:

- Try turning off the product by unplugging it from the AC power receptacle.
- Try powering the product from another AC power receptacle.
- Relocate or turn the antenna of the receiving device.
- Increase the distance between this product and the receiving device.

If these steps do not resolve the interference, please contact your local installing company or MYE Entertainment at 1-661-964-0217.

1. IN THE BOX ...



- 1) M156TV2 Personal Viewing Screen
- 2) Power Supply
- 3) AC Power Supply Cord
- 4) Manual

CONNECTION IDENTIFICATION




1	DC Power In. 2.5mm DC jack	6	RF Signal Input
2	AUX TV Controller Cable port. RJ45 jack	7	AUX Cablesat port. RJ45Jack
3	AUX Audio Output. 3.5mm stereo jack		
4	Firmware Download USB jack		
5	AUX High Defination Input Jack (Optional)		

Mounting the Screen and Making the Connections
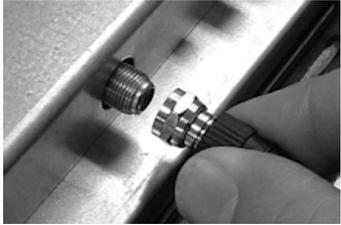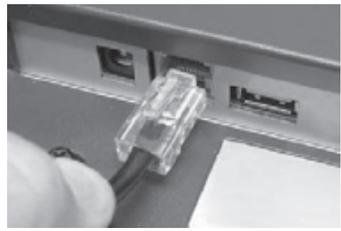
<p>Use the four screws (included) to fasten the screen to the mount. Using screws other than those supplied, may result in damage to the screen. It is <u>highly</u> recommended to <u>not</u> use a power tool when tightening these screws, as this may result in damage to the screen. Use a #2 Phillips screwdriver, taking care not to over-tighten!</p>	 <p>SCREEN MOUNTING SCREWS</p>
<p>Fasten the F-connector of the coaxial cable on to the fitting on the rear of the screen. It is important that care be taken with this connector, as over-tightening will result in serious damage to the screen. This connector should be started using only fingers and then tightened to 20 inch-pounds of torque, slightly more than finger-tight.</p>	
<p>For Strain Relief slide the DC power plug through the pre-installed wire tie and insert it into the DC jack on the TV. Pull the nylon tie snug around DC cable. This will also prevent the cable from becoming accidentally unplugged during use.</p>	
<p>When a secondary MYE Entertainment TV controller is installed, insert the controller cable's RJ45 plug into the jack on the back of the TV. Confirm that the plug's spring clip snaps into place and the plug is seated properly and securely in place.</p>	

2. Key Pad Orientation

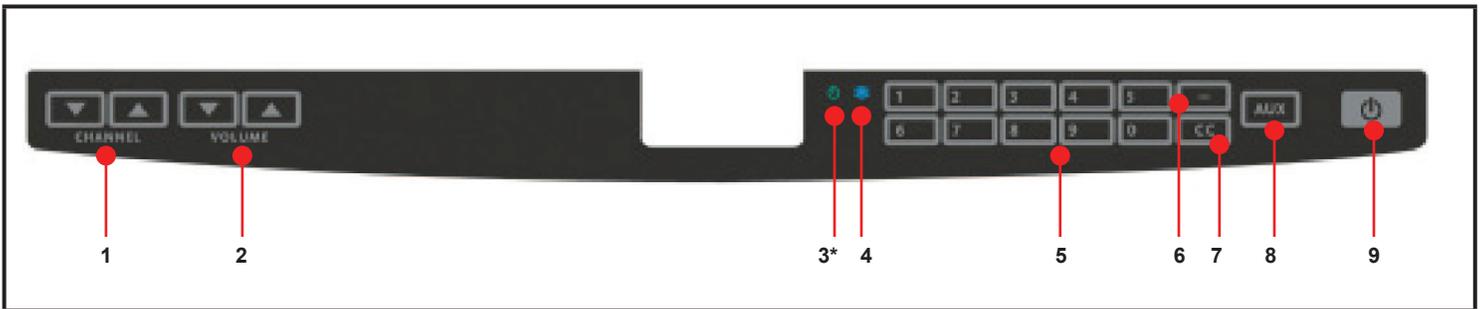

KEY PAD ORIENTATION

- 1 Channel (Up / Down)
- 2 Volume (Up / Down)
- 3* Intellijack Faulty Headphone Jack Indicator* (Blue = Faulty Headphone Jack Detected)(See below)
- 4 TV Status (Green = TV On) (Red = TV Stand by)
- 5 Direct Channel Access (1-0)
- 6 “Dash”Key : Direct Digital Access (Ex: 88 - 2)
- 7 Closed Caption / ENTER (Closed Caption / MUTE)
- 8 Source (Optional)
- 9 Power (On / Off)




Intellijack Icon

*The IntelliJack self diagnostic headphone circuit detects when the headphone jack has failed or been damaged. When a faulty headphone jack is detected, a BLUE “headphone” icon appears on the keypad (see #4 above). It will remain on until a new jack is installed and the circuit is reset. (See page 29). To reset the faulty headphone jack circuit, insert a known good pair of headphones for 10 seconds.

MAIN MENU ACCESS (No IR remote is required to access the TV MENU)

To access the MENU for SET UP and TV ADJUSTMENTS press “0002”

To navigate through the MENU use Channel Up / Down and Volume Up / Down and CC / –

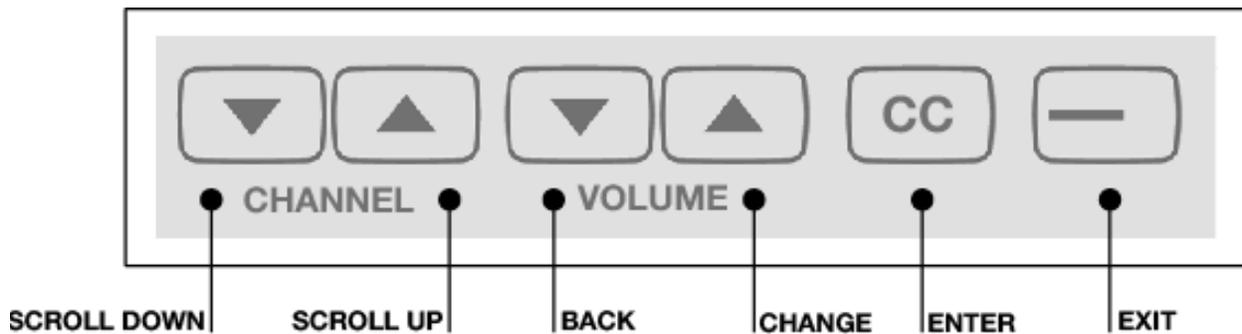

QUICK KEY CODES

0001 INSTANT CHANNEL PROGRAMMING FEATURE


0002 MENU

0003 CUSTOM FEATURES

3. CHANNEL MENU

CHANNEL MENU contains 4 sub-menu presets (Air/Cable, Auto Scan, Show/Hide, DTV Signal)

3.1 Air/Cable

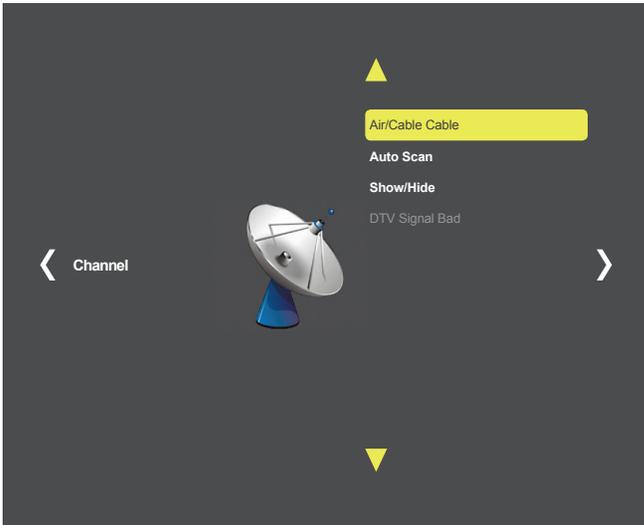


Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Channel.
2. Use **CHANNEL ▲▼** keys on Keypad to select Air/Cable.
3. Push **CC** Key to enter(Air or Cable)





Note : Pro:Idiom model TVs are locked to scan both AIR and CABLE. There is no ability to individually select Air or Cable.

3.2 Auto Scan

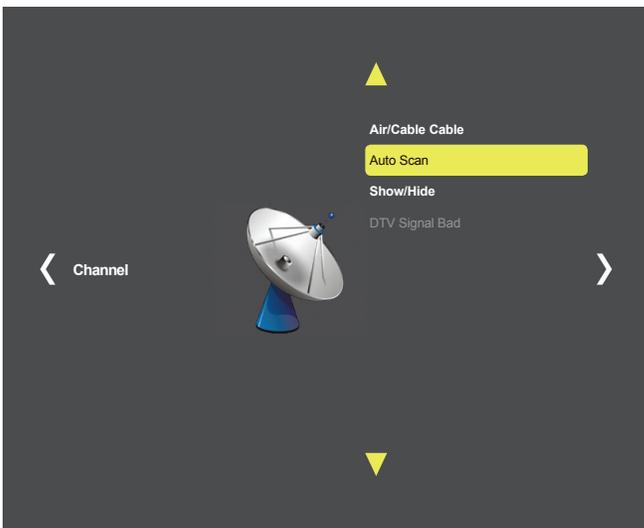

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Channel.
2. Use **CHANNEL ▲▼** keys on Keypad to select Auto Scan.
3. Push **CC** Key to enter.
4. Use **VOLUME ▼** keys on Keypad to select Yes.

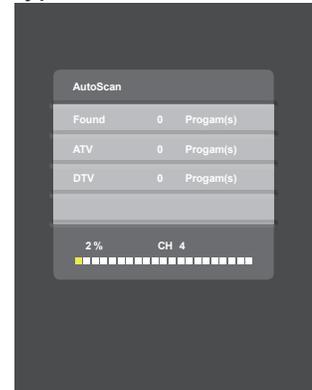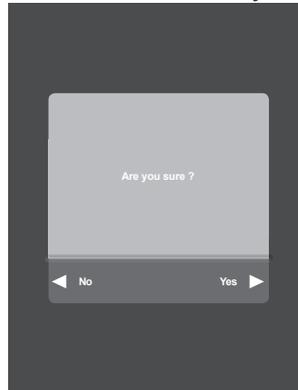


Broadcasting frequency is automatically searched and saved. The search starts from analog TV (NTSC) to digital TV (VSB/QAM/Pro:Idom) and takes from 4 to 5 minutes. Channel numbers are allocated for weak signals from analog broadcasting. In DTV, weak signals or signals without broadcasting are ignored.

Depending on the content provided by the cable or satellite company, there may be some content received that is inappropriate for your intended viewing audience. Once channel scanning is complete, these channels can be deleted as necessary by using the Keypad.

INPUT SIGNAL LEVEL REQUIREMENTS


Common sources of television signal are cable, satellite or over-the-air antenna systems. Many of these choices will provide signal in analog, digital or both even both formats. In order to provide high-quality images, the signal level supplied to each screen should be in the range of -70dBm to -5 dBm when read on analog channels. A signal level outside of this range will provide less than optimum results. In order to ensure the highest degree of satisfaction, MYE Entertainment recommends using a MYE Entertainment Certified Installer for installation & ongoing maintenance.

3.3 Show/Hide

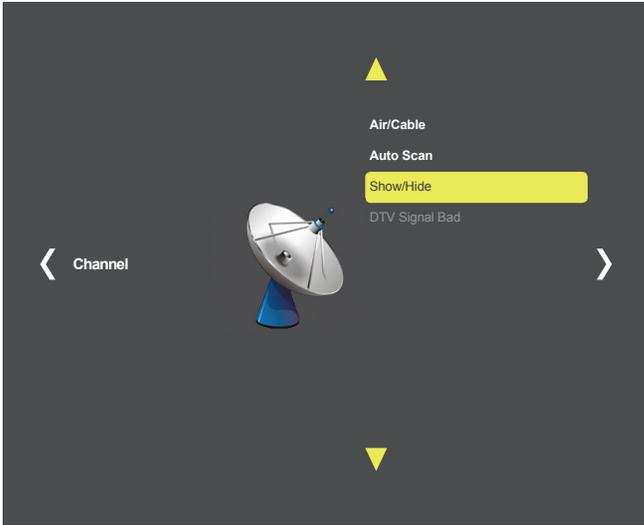

Enter MENU


1. Use **VOLUME ▲▼** keys on Keypad to select Channel.
2. Use **CHANNEL ▲▼** keys on Keypad to select Show/Hide.
3. Push **CC** Key to enter.

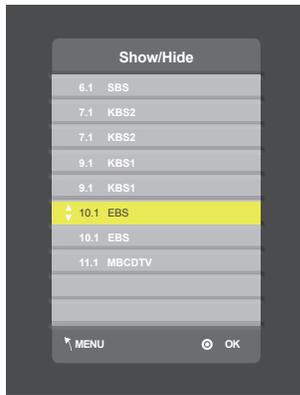

Enter MENU

1. Use **CHANNEL ▲▼** keys on Keypad to select Channel.
2. Push **CC** key to Hide channel.

3.4 DTV Signal

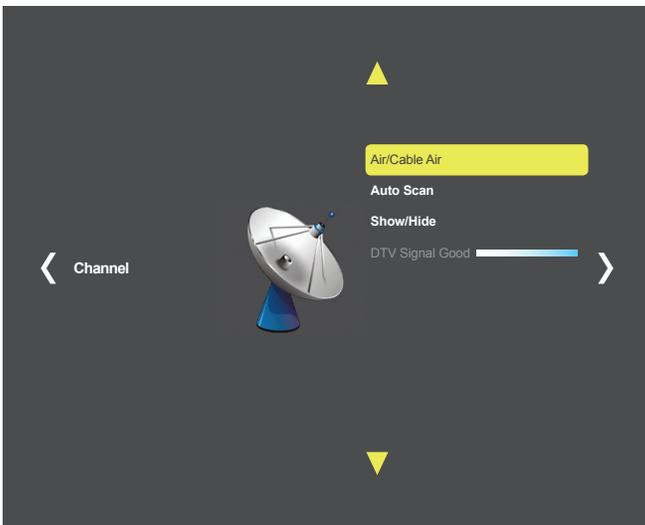


Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Channel.
- Signal window meter will show signal strength. (Bad/Normal/Good)

4. PICTURE MENU



PICTURE MENU contains 3 sub-menu presets (Picture Mode, Color Mode, Aspect Ratio)

4.1 Picture Mode


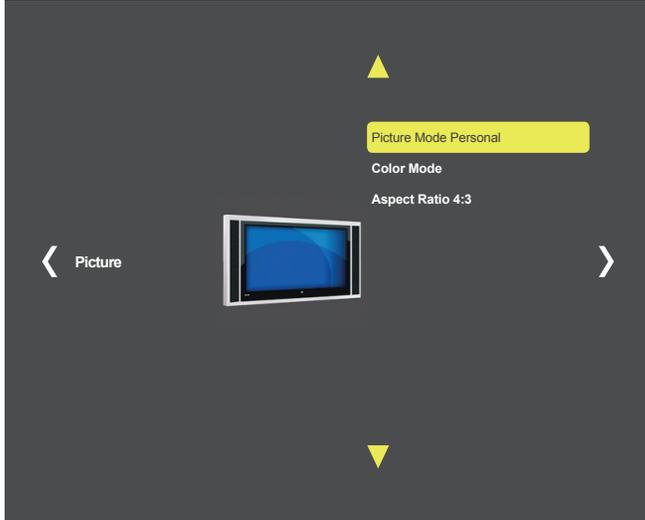


Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Picture.
2. Use **CHANNEL ▲▼** keys on Keypad to select Picture Mode.
3. Push **CC** Key to enter.

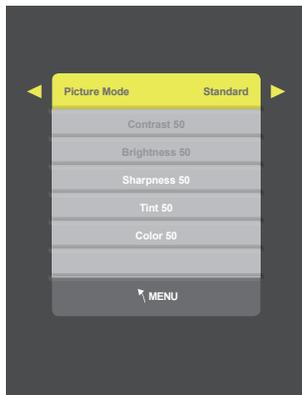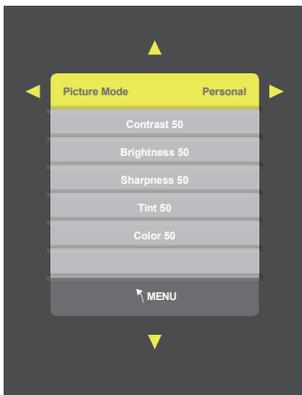


Picture Mode contains 4 video presets(Standard, Dynamic, Personal, Soft)

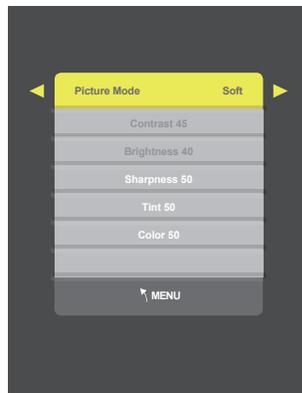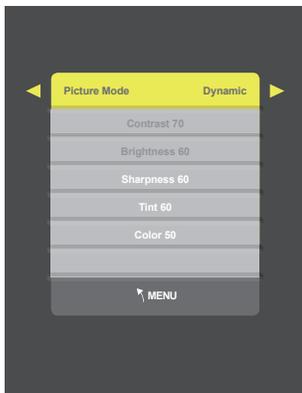

Enter MENU and SUB-MENU page

1. Use **VOLUME ▲▼** keys on Keypad to select Personal.
2. Use **CHANNEL ▲▼** keys on Keypad to select sub menu.
3. Push **CC** Key to enter/change setting.
4. Use **VOLUME ▲▼** keys to adjust level.


4.2 Color Mode

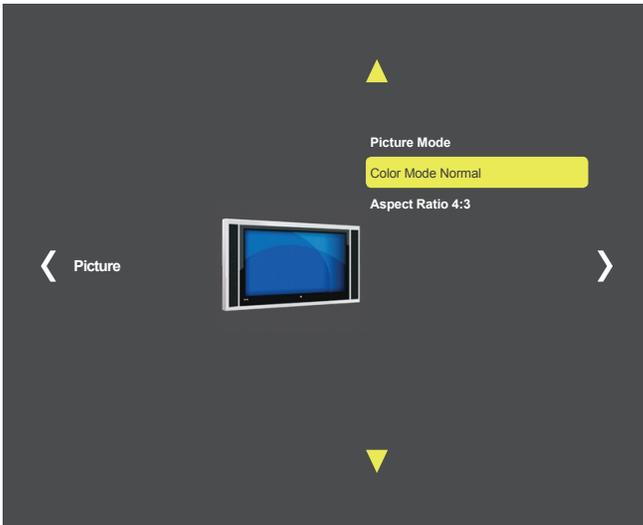


Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Picture.
2. Use **CHANNEL ▲▼** keys on Keypad to select Color Mode.
3. Push **CC** Key to enter.

Color Mode contains 3 video presets(Normal, Warm, Cool)

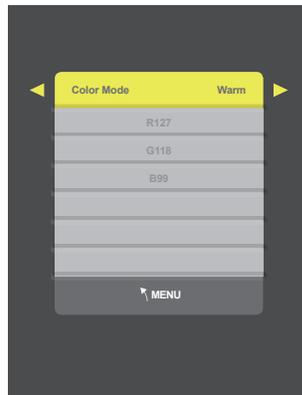


4.3 Aspect Ratio

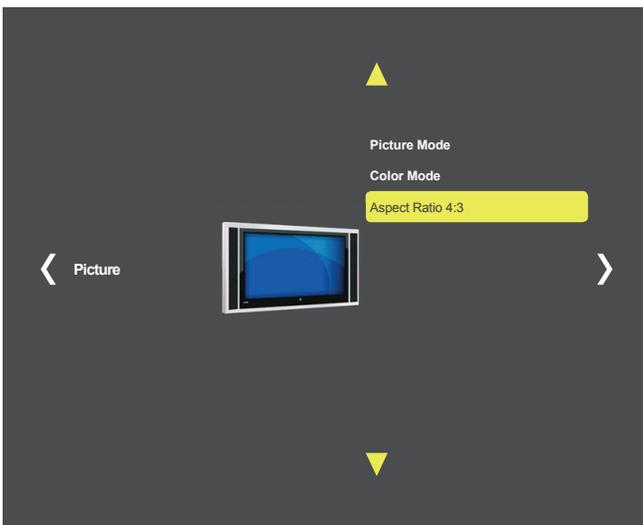

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Picture.
2. Use **CHANNEL ▲▼** keys on Keypad to select Aspect Ratio.
3. Push **CC** Key to enter.

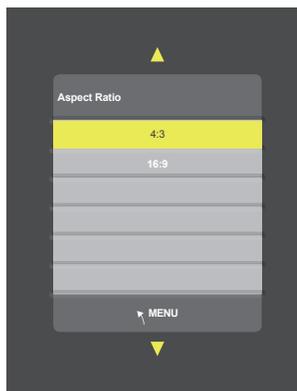


Enter MENU and SUB-MENU page
1. Use **CHANNEL ▲▼** keys to adjust setting.

5. AUDIO MENU

AUDIO MENU Contains 5 sub-menu presets (Equalizer, MTS, Audio Language, Surround-Sound, AVC)



5.1 Equalizer

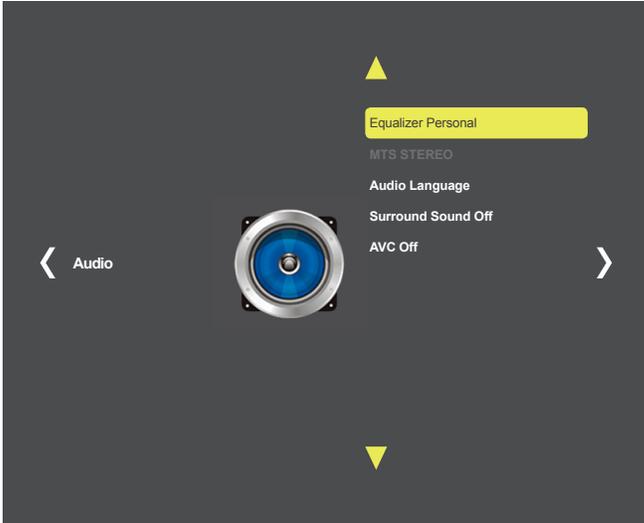

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Audio.
2. Use **CHANNEL ▲▼** keys on Keypad to select Equalizer.
3. Push **CC** Key to enter.
4. Use **VOLUME ▲▼** keys on Keypad to select.


Equalizer contains 5 Audio presets(Standard, Sport, Movie, Music, Personal)

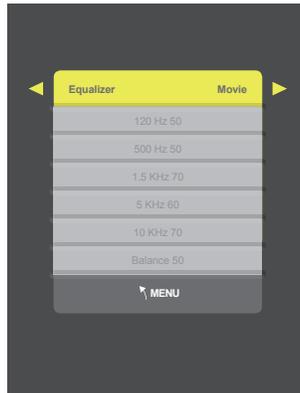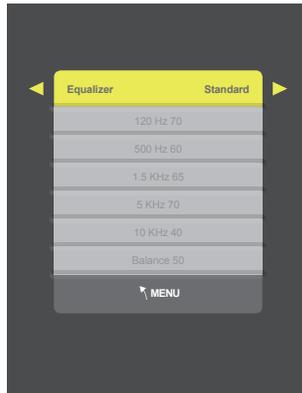

Enter MENU and SUB-MENU page

1. Use **VOLUME ▲▼** keys on Keypad to select Personal.
2. Use **CHANNEL ▲▼** keys on Keypad to select sub menu.
3. Use **VOLUME ▲▼** keys to adjust level.

5.2 MTS

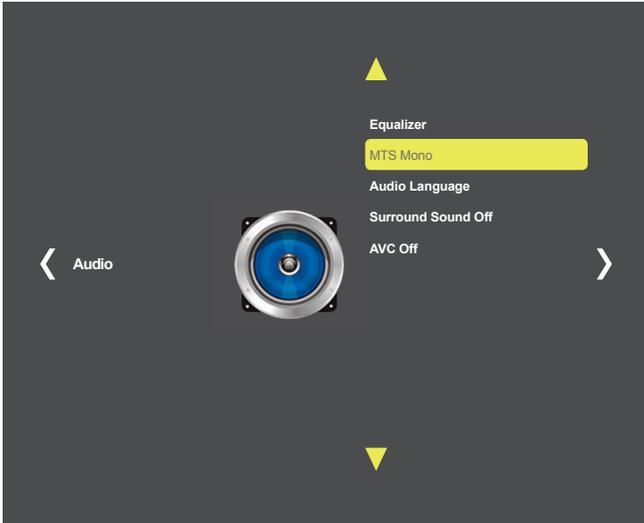


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Audio.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Audio MTS.
3. Push **CC** Key to enter.



1. Use **CHANNEL** ▲▼ keys on Keypad mode (Mono, STEREO, SAP)
2. Push MENU key.

5.3 Audio Language

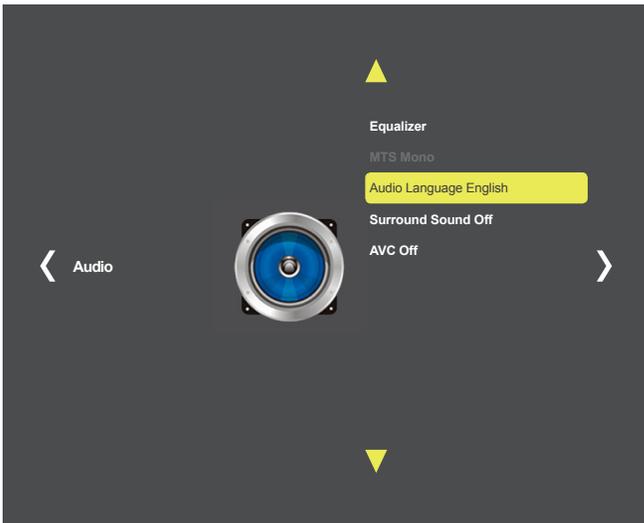


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Audio Language.
3. Push **CC** Key to enter.
4. Use **CHANNEL** ▲▼ keys on Keypad to select.

Audio Language contains 3 Language presets(English, French, Spanish)




5.4 Surround Sound

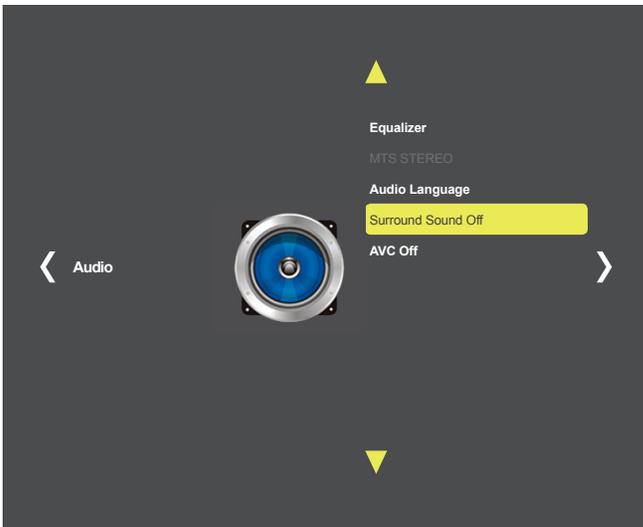

Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Audio.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Surround Sound.
3. Push **CC** Key to enter/change setting(ON or OFF).

5.5 AVC (Auto Volume Control)

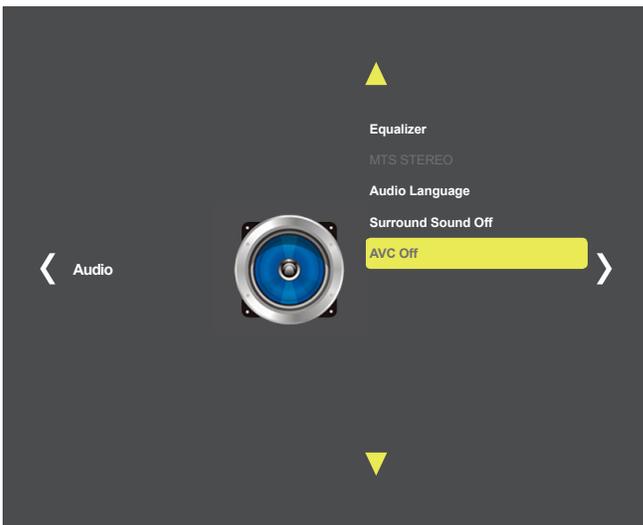


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Audio.
2. Use **CHANNEL** ▲▼ keys on Keypad to select AVC.
3. Push **CC** Key to enter/change setting(ON or OFF).

6. TIME MENU

TIME MENU contains 6 sub-menu presets (Sleep Timer, Time Zone, DST, Time Format, Auto Sync, Clock)


6.1 Sleep Timer

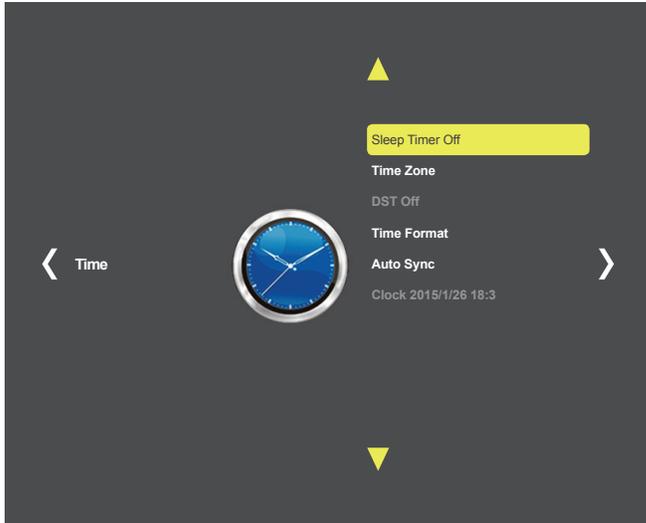


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Time.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Sleep Timer.
3. Push **CC** Key.
4. Use **CHANNEL** ▲▼ keys on Keypad to select time.

Sleep Timer contains 11 Timers presets(Off, 5, 10, 15, 30, 60, 90, 120, 180, 240Min, Personal)

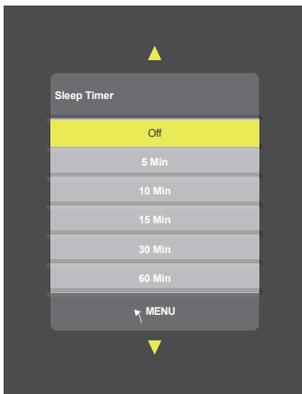


6.2 Time Zone

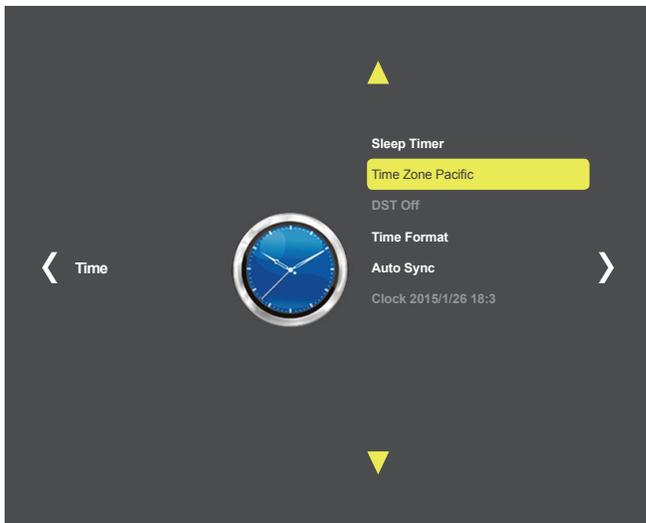


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Time.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Time Zone.
3. Push **CC** Key.
4. Use **CHANNEL** ▲▼ keys on Keypad to select area.

Time Zone contains 7 Areas presets(Atlantic, Eastern, Central, Mountain, Pacific, Alaska, Hawaii)

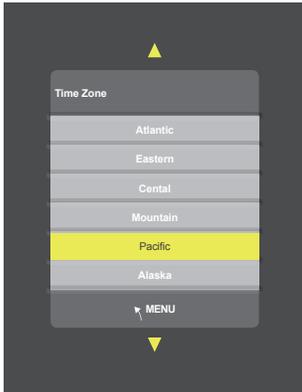


6.3 Time Format

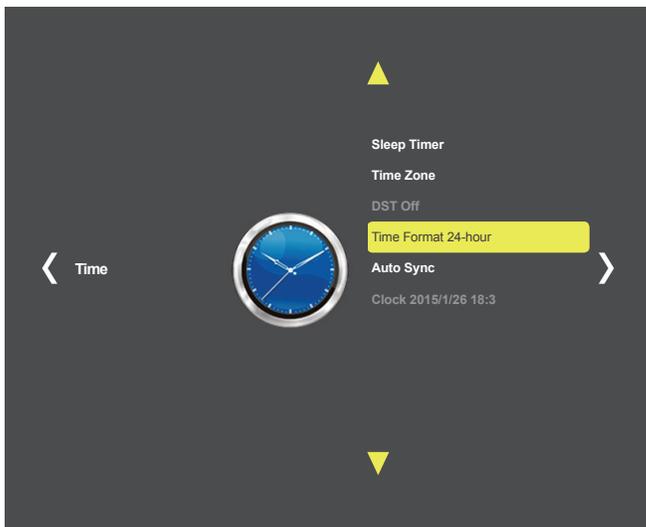

Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Time.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Time Format.
3. Push **CC** key to enter/change setting(12-Hour or 24-Hour).


6.4 Auto Sync

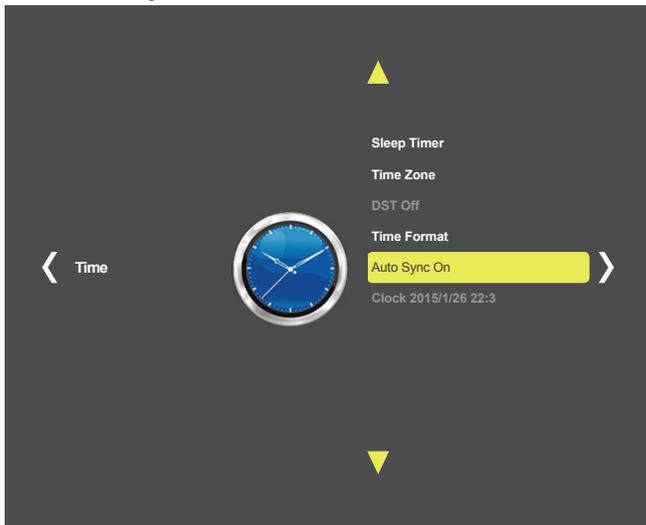

Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Time.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Auto Sync.
3. Push **CC** key to enter/change setting(ON or OFF).


6.5 DST

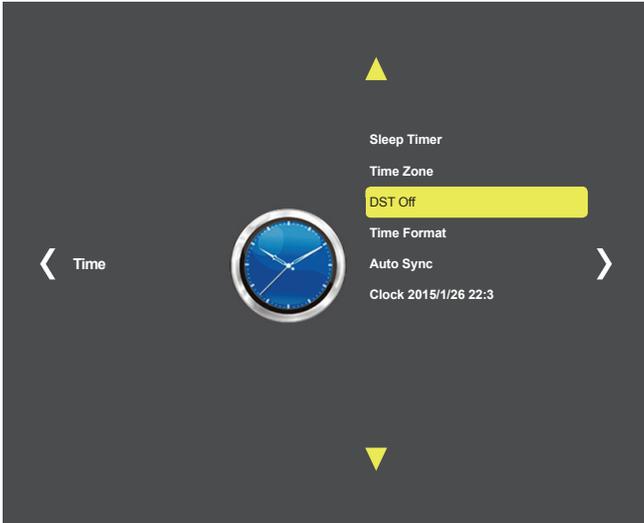

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Time.
2. Use **CHANNEL ▲▼** keys on Keypad to select DST.
3. Push **CC** key to enter/change setting(ON or OFF).

6.6 Clock

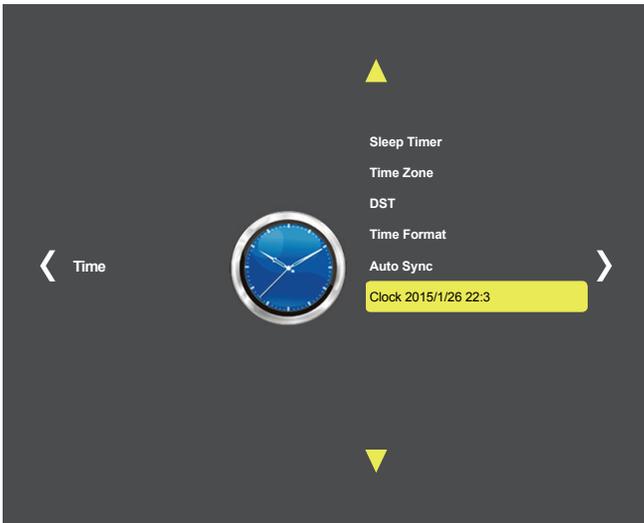

Enter MENU


1. Use **VOLUME ▲▼** keys on Keypad to select Time.
2. Use **CHANNEL ▲▼** keys on Keypad to select Clock.
3. Push **CC** key.
4. Use **CHANNEL ▲▼** keys on Keypad to select sub menu.
5. Use **VOLUME ▲▼** keys to adjust time.



7. SETUP MENU

SETUP MENU contains 5 sub-menu presets (Menu Language, Transparent, Close Caption, Restore Default, USB Update)


7.1 Menu Language

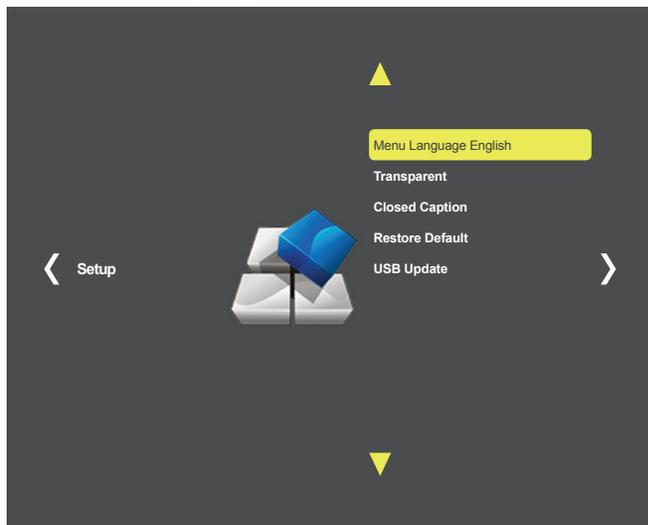


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Menu Language.
3. Push **CC** key.
4. Use **CHANNEL** ▲▼ keys on Keypad to select.

Menu Language contains 3 Languages presets(English, French, Spanish)

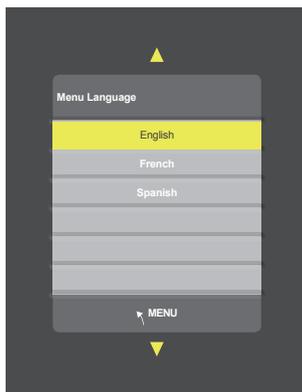


7.2 Transparent

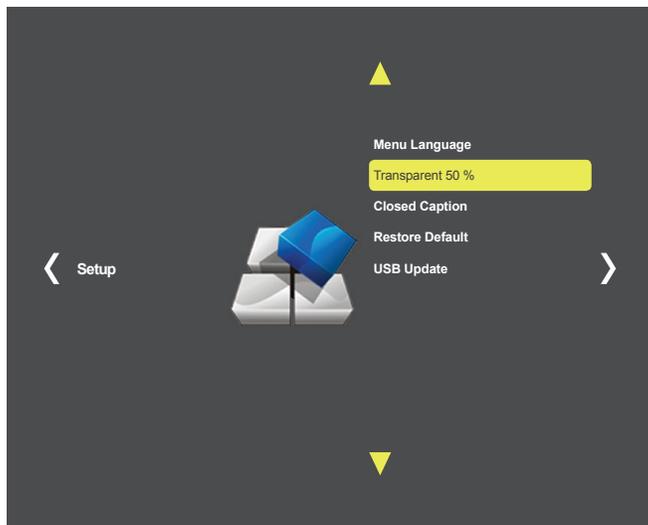


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Transparent.
3. Push **CC** key.
4. Use **CHANNEL** ▲▼ keys on Keypad to select.

Transparent contains 5 presets(0, 25, 50, 75, 100%)

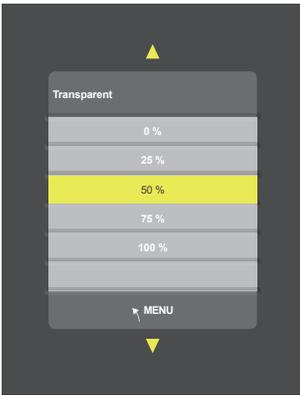


7.3 Close Caption

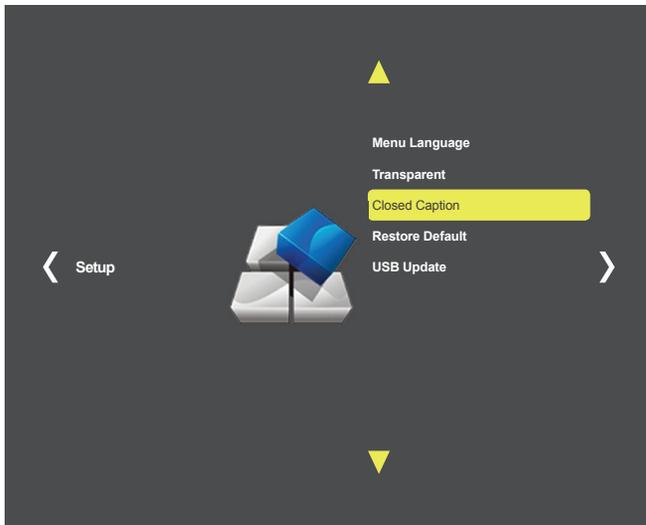


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Close Caption.
3. Push **CC** key.
4. Use **VOLUME** ▲▼ keys on Keypad to select CC On or CC Off.
5. Use **CHANNEL** ▲▼ keys on Keypad to select sub menu.

- Basic CC1, CC2, CC3, CC4 mode
- Basic Text1, Text2, Text3, Text4 mode
- Advanced Service1, Service2, Service3, Service4, Service5, Service6 mode

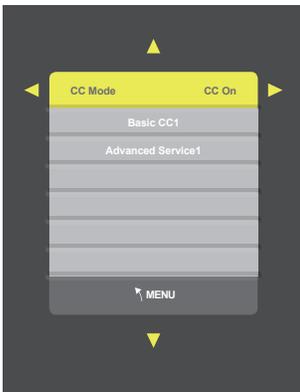

7.4 Restore Default

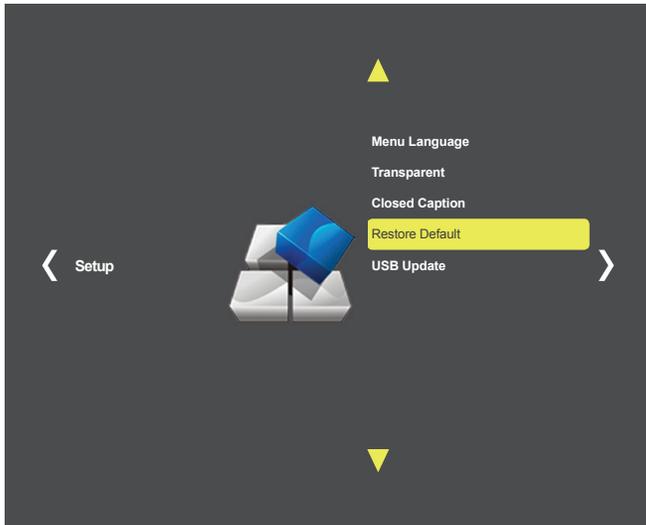


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select Restore Default.
3. Push **CC** key.
4. Use **VOLUME** ▼ keys on Keypad to select Yes.




7.5 USB Update

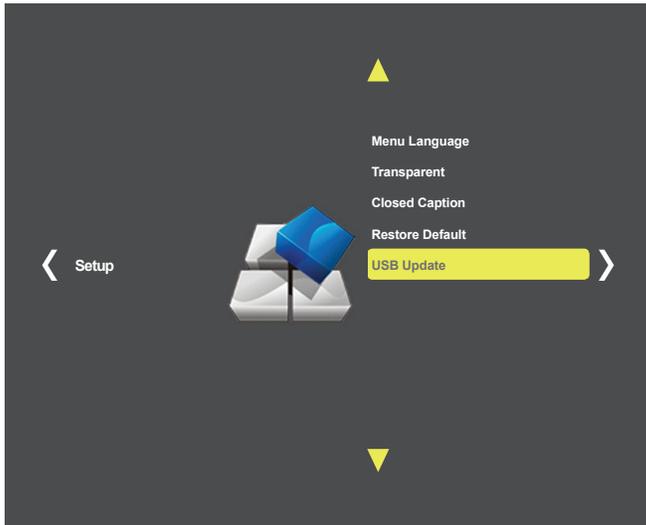


Enter MENU

1. Use **VOLUME** ▲▼ keys on Keypad to select Setup.
2. Use **CHANNEL** ▲▼ keys on Keypad to select USB Update.
3. Push **CC** key.
4. Use **VOLUME** ▼ keys on Keypad to select Yes.

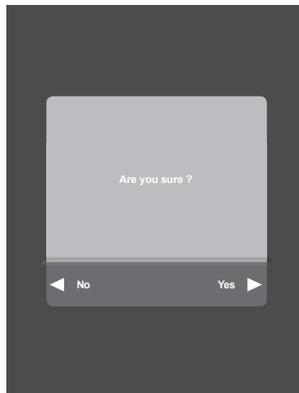


8. LOCK MENU

LOCK MENU contains 6 sub-menu presets (Change Password, System Lock, Input Block, US, CANADA, Un-rated)

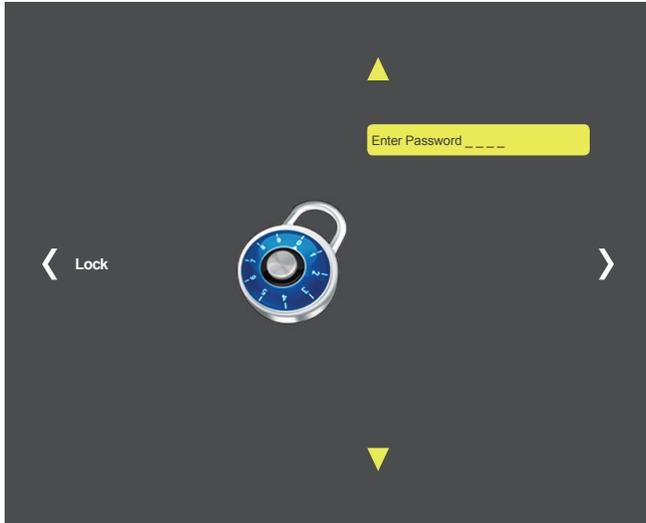


Enter LOCK MENU
Enter Password "0000" on the number keypad.
(Factory set password is "0000")


8.1 Change Password

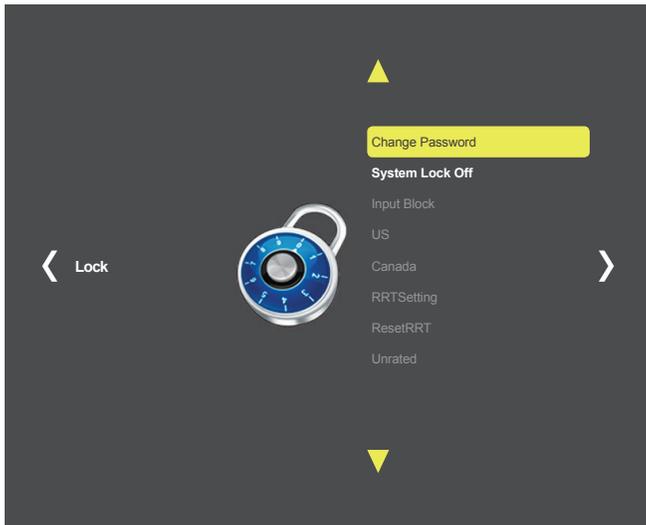

Enter MENU
1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select Change Password.
3. Push **CC** key.
4. Enter Old Password Number keys.
(Factory set password is "0000")
5. Enter New Password Number Keys.
Enter Old Password
Enter New Password
Clear Cancel
6. Enter Confirm Password Number Keys.

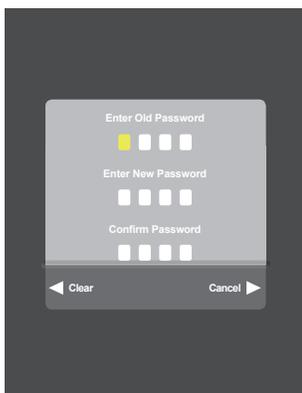


8.2 System Lock

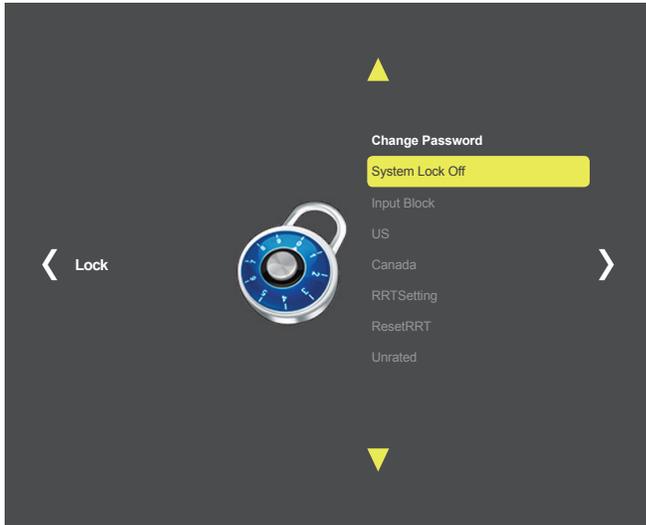

Enter MENU


1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select System Lock.
3. Push **CC** key to enter/change setting(On or Off).

8.3 Input Block

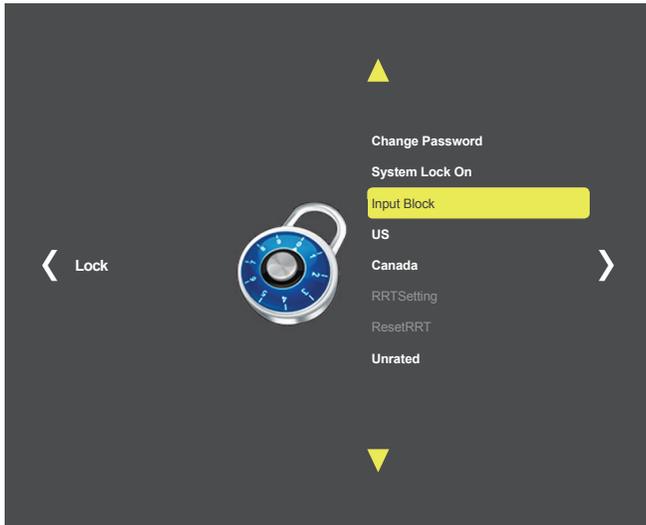


Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select Inter Block.
3. Push **CC** key.
4. Use **CHANNEL ▲▼** keys on Keypad to select SOURCE.
5. Use **VOLUME ▲▼** keys on Keypad to select(Block or Un-Block).

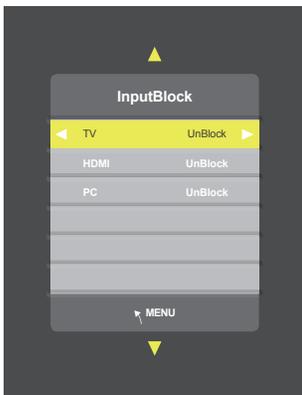

8.4 US

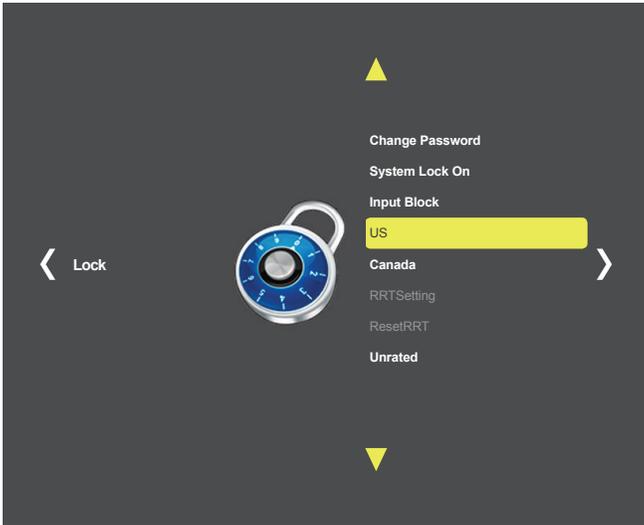

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select US.
3. Push **CC** key.




Enter SUB-MENU Page

1. Use **CHANNEL ▲▼** keys on Keypad to select sub-menu.
2. Push **CC** key.

8.4.1 TV

Enter SUB-MENU

1. Use **CHANNEL ▲▼** keys on Keypad to select.
2. Push **CC** key.

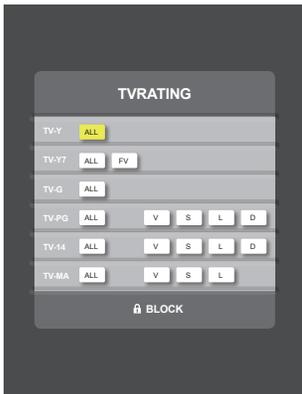

8.4.2 MPAA


Enter SUB-MENU

1. Use **CHANNEL ▲▼** keys on Keypad to select.

- Rating
- G : General audiences
 - PG : Parental guidance suggested
 - PG-13 : Parents strongly cautioned
 - R : Restricted
 - NC-17 : No One 17 and under admitted
 - X : Adult Only



8.5 CANADA

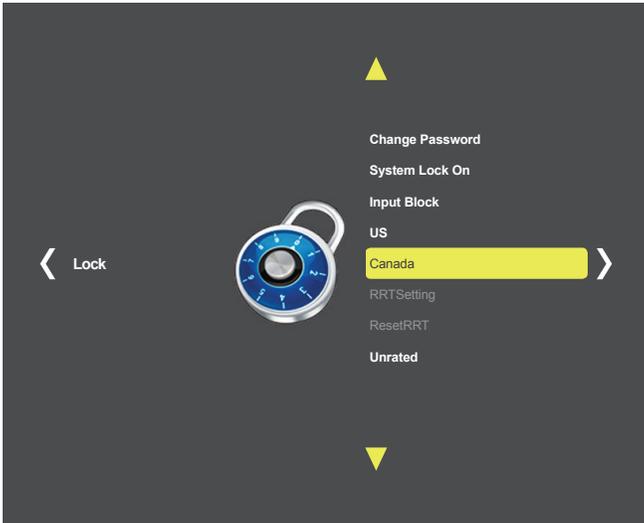

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select CANADA.
3. Push **CC** key.




Enter SUB-MENU

1. Use **CHANNEL ▲▼** keys on Keypad to select.

8.6 Unrated

Enter MENU

1. Use **VOLUME ▲▼** keys on Keypad to select Lock.
2. Use **CHANNEL ▲▼** keys on Keypad to select Unrated.
3. Push **CC** key to enter/change setting(On or Off).

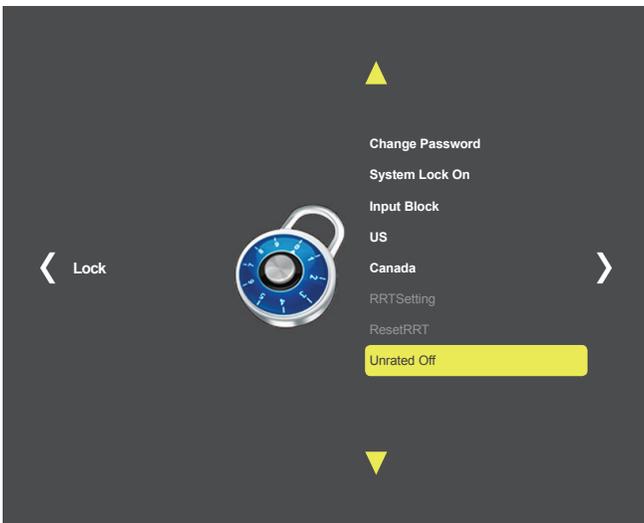

9. Custom Features

Custom Features		
Detect Vibration		Off
Chanel Default Time		Off
Chanel Default		Off
Auto Default		Off
Auto Power On		Off
Manual CH Setting		
Set Factory Default		
SW Version	MV :	CV :

To enter CUSTOM FEATURES menu

1. Enter the code "0003" on the number keypad
2. CUSTOM FEATURES menu (OSD) will appear
 - Detect Vibration
 - Auto Power On
 - Channel Default Time
 - Manual Channel Setting
 - Channel Default
 - Set Factory Default (Reset)
 - Auto Default

Custom Features		
Detect Vibration		Off
Chanel Default Time		Off
Chanel Default		Off
Auto Default		Off
Auto Power On		Off
Manual CH Setting		
Set Factory Default		
SW Version	MV :	CV :

Used to set a vibration monitoring time. When no vibration is detected on the cardio equipment after the assigned monitoring time the TV will automatically turn Off.

In CUSTOM FEATURES menu

1. Press CHANNELUP/DOWN keys to select DETECT VIBRATION
2. Press OK key to cycle through and select the desired Vibration monitoring time in minutes (1-8). When no vibration is detected on the cardio equipment for the assigned number of minutes the TV will automatically turn off.

Custom Features		
Detect Vibration		Off
Chanel Default Time		Off
Chanel Default		Off
Auto Default		Off
Auto Power On		Off
Manual CH Setting		
Set Factory Default		
SW Version	MV :	CV :

Program any channel for one touch Home channel access. Popular Home channels include child care camera and digital signage.

- Program any designated Home Channel.
- Home Channel displayed when TV is first powered on.
- Home key button for direct access on keypad.

In CUSTOM FEATURES menu

1. Press **CHANNEL ▲▼** keys to CHANNEL DEFAULT TIME

Activate Default Channel

1. Press **CHANNEL ▲▼** keys to CHANNEL DEFAULT
2. Press **VOLUME ▲▼** key to cycle through and select ON

Deactivate Auto Default

1. Press **CHANNEL ▲▼** keys to AUTO DEFAULT
2. Press **VOLUME ▲▼** key to cycle through and select OFF

Go to TV Channel List

1. Press **CHANNEL ▲▼** keys to MANUAL CH SETTING
2. Press **VOLUME ▲▼** key to enter TV CHANNEL LIST
3. Press **CHANNEL ▲▼** keys to select desired channel to be used as HOME channel

Set the HOME Default Channel

1. Press **CC** key to cycle through / select CH Def & Auto Def
 - a. This channel is now assigned as the channel the TV will default to upon being turned on.
 - b. This channel is now assigned as the channel the TV will go to when the HOME key is pressed.

Press EXIT key.

Custom Features		
Detect Vibration		Off
Chanel Default Time		Off
Chanel Default		Off
Auto Default		Off
Auto Power On		Off
Manual CH Setting		
Set Factory Default		
SW Version	MV :	CV :

Exclusive feature works with in-club private TV networks including ClubCom™ and Digital Signage systems.

When turned on the TV will automatically go the club promotional channel.

The user cannot change the channel until the promotional programming has ended. The TV then changes to the secondary club “Home Channel” at which time the user can change to any desired TV channel.

Enter the CUSTOM FEATURES menu page and then:

Set the TV’s Vibration Detection Circuit

1. Press **CHANNEL ▲▼** keys to highlight DETECT VIBRATION (Detects vibration or use of the cardio equipment)
2. Press **VOLUME ▲▼** key to cycle through and select the desired vibration time in minutes (1-8). When no vibration is detected on the cardio equipment for the assigned number of minutes the TV will automatically switch to the club Home channel.

Set the Channel Default Time

1. Press **CHANNEL ▲▼** keys to highlight CHANNEL DEFAULT TIME and set the desired viewing time of the Promotional Network Channel.
2. Press **VOLUME ▲▼** key to cycle through and select time setting. (Off - 10 - 20 - 30 - 40 - 50 - 60 seconds)
 - a. During this programmed time the viewer will be unable to navigate off the Promotional Network Channel.

Activate Channel Default

1. Press **CHANNEL ▲▼** keys to highlight CHANNEL DEFAULT
2. Press **VOLUME ▲▼** key to cycle through and set to ON.

Activate Auto Default

1. Press **CHANNEL ▲▼** keys to highlight AUTO DEFAULT
2. Press **VOLUME ▲▼** key and cycle through and set to ON.

Go to TV Channel List

1. Press **CHANNEL ▲▼** keys to highlight MANUAL CH SETTING
2. Press **VOLUME ▲▼** key to enter and go to TV CHANNEL LIST Set the HOME channel.


Set the HOME Channel

1. Press **CHANNEL ▲▼** keys to scroll to the desired channel to be set as he HOME channel.
2. Press **CC** key to cycle through / select AUTO DEFAULT
 - a. This channel is now assigned as the channel the TV will switch to when no vibration is detected on the cardio equipment.

Set the Promotional Network channel

1. Press **CHANNEL ▲▼** keys to scroll to desired channel to be set as the Promotional Network Channel at TV start up
2. Press **CC** key to cycle through / select Channel Default
 - a. This channel is now assigned as the channel the TV will default to upon being turned on.
 - b. Users will be unable to navigate off this channel during the preset Channel Default Time.

Press EXIT key

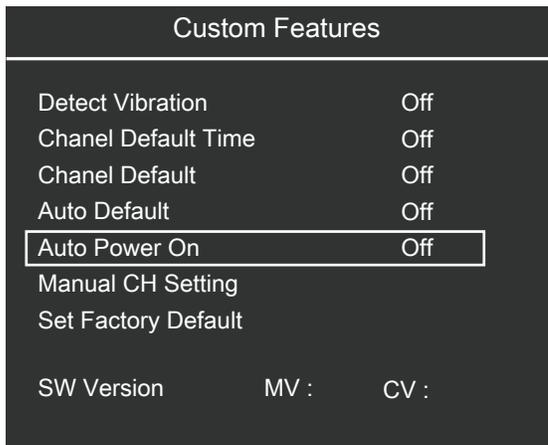

Used to change the TV POWER ON from factory setting OFF. Upon being energized from a NO POWER state the TV will automatically turn on.

In CUSTOM FEATURES menu


1. Press **CHANNEL ▲▼** keys to select AUTO POWER ON
2. Press **VOLUME ▲▼** key to enter / change setting (ON - OFF)
3. Press EXIT key.

10. Intellijack - Headphone Jack Replacement



Intellijack Icon

*The IntelliJack self diagnostic headphone circuit detects when the headphone jack has failed or been damaged. When a faulty headphone jack is detected, a BLUE "headphone" icon appears on the keypad (see #4 above). It will remain on until a new jack is installed and the circuit is reset. To reset the faulty headphone jack circuit, insert a known good pair of headphones for 10 seconds.

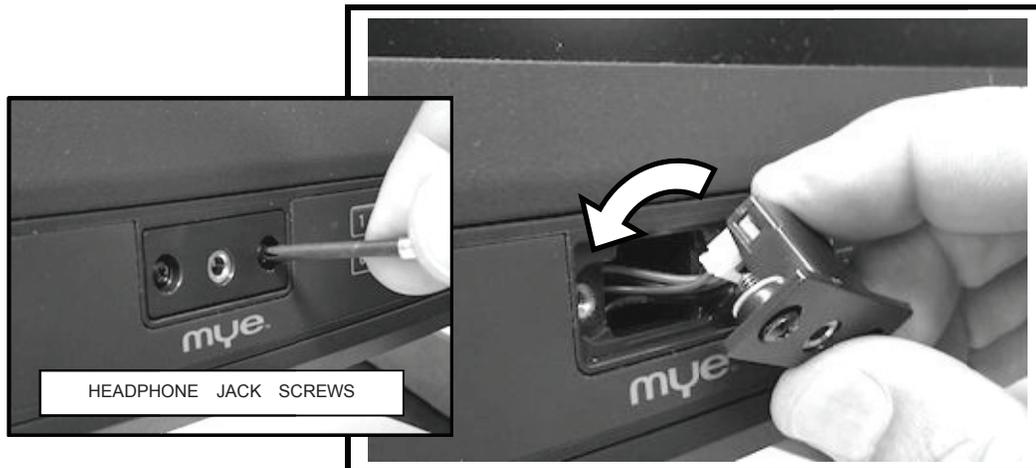

- 1) UNSCERW THE JACK ASSEMBLY SCREW, ALTERNATING LEFT AND RIGHT IN ORDER TO BACK THE ASSEMBLY OUT.
- 2) REMOVE JACK ASSEMBLY, TIPPING THE FRONT FORWARD SO THE ASSEMBLY WIRES CLEAR THE OPENING.
- 3) UNPLUGTHE OLD HEADPHONE JACK AND DISCARD. PLUG IN NEW HEADPHONE JACK TO WIRE HARNESS.
- 4) INSERT NEW HEADPHONE JACK ASSEMBLY, TIPPING IT FORWARD SO ASSEMBLY WIRES CLEAR THR OPENING.
- 5) ALIGN AND SCREW IN THE HEADPHONE JACK ASSEMBLY SCREWS.
- 6) RESET HEADPHONE JACK ICON BY INSERTING A KNOWN-GOOD HEADPHONE PLUG INTO THE JACK FOR 10 SECONDS.

IMPORTANT : Faulty headphones can trigger the headphone jack icon. It is inportant to test the headphone jack prior to replacement. If the head-phone jack is deemed OK, simply reset the faulty headphone jack (SETUP 6).

11- WARRANTY

PLEASE READ THESE WARRANTY TERMS AND CONDITIONS CAREFULLY BEFORE USING YOUR MYE ENTERTAINMENT PRODUCT. BY USING THE EQUIPMENT, YOU ARE CONSENTING TO BE BOUND BY THE FOLLOWING WARRANTY TERMS AND CONDITIONS.

LIMITED WARRANTY

MYE ENTERTAINMENT (MYE) WARRANTS ALL NEW MYE PRODUCTS TO BE FREE FROM DEFECTS IN MATERIALS AND MANUFACTURERS FOR THE WARRANTY PERIODS SET FORTH BELOW. THE WARRANTY PERIODS COMMENCE ON THE INVOICE DATE OF THE ORIGINAL PURCHASE. THIS WARRANTY APPLIES ONLY AGAINST DEFECTS DISCOVERED WITHIN THE WARRANTY PERIOD AND EXTENDS ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT. PARTS REPAIRED OR REPLACED UNDER THE TERMS OF THIS WARRANTY WILL BE WARRANTED FOR THE REMAINDER OF THE ORIGINAL WARRANTY PERIOD ONLY. TO CLAIM UNDER THIS WARRANTY, THE BUYER MUST NOTIFY MYE OR YOUR AUTHORIZED MYE ENTERTAINMENT DEALER WITHIN 30 DAYS AFTER THE DATE OF DISCOVERY OF ANY NONCONFORMITY AND MAKE THE AFFECTED PRODUCT AVAILABLE FOR INSPECTION BY MYE ENTERTAINMENT OR ITS SERVICE REPRESENTATIVE. MYE ENTERTAINMENT PRODUCTS DEEMED DEFECTIVE BY A MYE ENTERTAINMENT REPRESENTATIVE WILL BE ISSUED A RETURN AUTHORIZATION NUMBER. MYE ENTERTAINMENT WILL NOT ACCEPT RETURNS WITHOUT A RETURN AUTHORIZATION NUMBER. MYE ENTERTAINMENT RESERVES THE RIGHT, AT THEIR OPTION, TO REPAIR OR REPLACE THE PRODUCT AFTER VERIFICATION OF DEFECT. PRODUCT THAT FAILS AFTER THE WARRANTY PERIOD EXPIRES WILL BE REPAIRED OR REPLACED AT THE CURRENT PART AND LABOR PRICING AFTER AUTHORIZATION FROM THE CUSTOMER. REPAIRS ARE WARRANTED FOR 90 DAYS. MYE ENTERTAINMENT'S OBLIGATIONS UNDER THIS WARRANTY ARE LIMITED AS SET FORTH BELOW:

WARRANTY PERIODS AND COVERAGE:

M156TV2-NAQ2	3 YEAR PARTS, REPAIR LABOR
M156TV2-PRO	3 YEAR PARTS, REPAIR LABOR

CONDITIONS AND RESTRICTIONS:

THIS WARRANTY IS VALID ONLY IN ACCORDANCE WITH THE FOLLOWING CONDITIONS:

THE WARRANTY APPLIES TO THE MYE ENTERTAINMENT PRODUCT ONLY 1) WHILE IT REMAINS IN THE POSSESSION OF THE ORIGINAL PURCHASER AND PROOF OF PURCHASE IS DEMONSTRATED. 2) IT HAS NOT BEEN SUBJECT TO ACCIDENT, MISUSE, ABUSE, IMPROPER SERVICE, MECHANICAL OR ELECTRICAL NON-MYE ENTERTAINMENT AUTHORIZED MODIFICATION. 3) CLAIMS MADE WITHIN THE WARRANTY PERIOD.

THIS WARRANTY DOES NOT COVER DAMAGED OR FAILURE CAUSED BY ELECTRICAL WIRING NOT BEING IN COMPLIANCE WITH ELECTRICAL CODES OR MYE'S OWNER MANUAL SPECIFICATIONS, OR FAILURES TO PROVIDE REASONABLE AND NECESSARY MAINTENANCE AS OUTLINED IN THE OWNER'S MANUAL.

WARRANTIES OUTSIDE THE UNITED STATES AND CANADA MAY VARY. PLEASE CONTACT YOUR LOCAL DEALER FOR DETAILS.

LIMITED WARRANTY SHALL NOT APPLY TO:

- 1) SOFTWARE UPGRADES.
- 2) NORMAL WEAR AND TEAR, CONSUMABLES AND COSMETIC ITEMS INCLUDING BUT NOT LIMITED TO LABELS.
- 3) REPAIRS REFORMED ON MYE PRODUCTS MISSING A SERIAL NUMBER OR WITH A SERIAL TAG THAT HAS BEEN ALTERED, REATTACHED OR DEFACED.
- 4) SERVICE CALLS TO CORRECT INSTALLATION OF THE PRODUCT OR INSTRUCT OWNERS ON HOW TO USE THE PRODUCT.
- 5) PICK UP AND DELIVERY INVOLVING REPAIRS
- 6) ANY LABOR COSTS INCURRED BEYOND THE APPLICABLE LABOR WARRANTY PERIOD
- 7) THE USER IS CAUTIONED THAT CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER OF THE PRODUCT COULD VOID THE USER'S AUTHORITY TO OPERATE THE PRODUCT.

WARRANTY – cont.

THE WARRANTIES PROVIDED HEREIN ARE THE EXCLUSIVE WARRANTIES GIVEN BY MYE ENTERTAINMENT AND SUPERSEDE ANY PRIOR, CONTRARY OR ADDITIONAL REPRESENTATIONS, WHETHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE THAT APPLY TO ANY PARTS DESCRIBED ABOVE ARE LIMITED IN DURATION TO THE PERIODS OF EXPRESS WARRANTIES GIVEN ABOVE FOR THOSE SAME PARTS. MYE HEREBY DISCLAIMS AND EXCLUDES THOSE WARRANTIES THEREAFTER. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. MYE ENTERTAINMENT ALSO HEREBY DISCLAIMS AND EXCLUDES ALL OTHER OBLIGATIONS OR LIABILITIES, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, WITH RESPECT TO ANY NONCONFORMANCE OR DEFECT IN ANY PRODUCT, INCLUDING BUT NOT LIMITED TO: (A) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN TORT, WHETHER OR NOT ARISING FROM THE NEGLIGENCE OF MYE OR ITS SUPPLIERS (WHETHER ACTIVE, PASSIVE OR IMPUTED); AND (B) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY FOR LOSS OF OR DAMAGE TO ANY PRODUCT. THIS DISCLAIMER AND RELEASE SHALL APPLY EVEN IF THE EXPRESSED WARRANTY SET FORTH ABOVE FAILS OF ITS ESSENTIAL PURPOSE.

FOR ANY PRODUCT DESCRIBED ABOVE THAT FAILS TO CONFORM TO ITS WARRANTY, MYE ENTERTAINMENT WILL PROVIDE, AT THEIR OPTION ONE OF THE FOLLOWING: 1) REPAIR OR 2) REPLACEMENT.

MYE AND/OR ITS SUPPLIERS SHALL HAVE NO OBLIGATION OR LIABILITY, WHETHER ARISING IN CONTRACT (INCLUDING WARRANTY), TORT (INCLUDING ACTIVE, PASSIVE, OR IMPUTED NEGLIGENCE AND STRICT LIABILITY), OR OTHERWISE, FOR DAMAGE TO THE PRODUCT, PROPERTY DAMAGE, LOSS OF USE, REVENUE OR PROFIT, COST OF CAPITAL, COST OF SUBSTITUTE PRODUCT, ADDITIONAL COSTS INCURRED BY BUYER (BY WAY OF CORRECTION OR OTHERWISE) OR ANY OTHER INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL PRODUCT. THIS EXCLUSION APPLIES EVEN IF THE ABOVE WARRANTY FAILS OF ITS ESSENTIAL PURPOSES AND REGARDLESS OF WHETHER SUCH DAMAGES ARE SOUGHT FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE OR STRICT LIABILITY IN TORT OR UNDER ANY OTHER LEGAL THEORY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.



MYE Inc
28640 Westinghouse Place
Valencia, Ca. 91355
1-661-964-0217
www.myclubtv.com

MYE. INC ALL Rights Reserved 2016

